

Special Features of “Ace”—the Talking, Teaching Dog

“Ace”—the Talking, Teaching Dog plays 23 cool phrases and fun sound effects and glows green and red for answer reinforcement. When you get three or more in a row correct answers, “Ace” is overjoyed and shows it by laughing and shaking for even more positive reinforcement.



Press this 3-position button to select the type of sounds you want to hear. Press to hear Speech, Sound Effects, or a mix of Speech and Sound Effects.



Press this 3-position button on the front of the pen to choose volume level: low, high, or mute (no sound).

“Ace’s” eyes are a special window that glows GREEN for correct answers and RED for incorrect answers.

Using “Ace”—the Talking, Teaching Dog

1. Read a question.
2. Position “Ace” straight up and down and touch an answer dot by pressing “Ace’s” tip on the center of the answer dot.

If correct, “Ace” plays positive sounds and glows green.


If incorrect, “Ace” plays wrong answer sounds and glows red.

If you get three or more in a row correct, “Ace” plays special laughing sounds and shakes with excitement!

Caring for “Ace”—the Talking, Teaching Dog

How to Install and Replace the Batteries

“Ace” requires 2 AAA batteries, not included. To install the batteries, use a coin to unscrew the battery door on back of the pen. Turn coin in a counterclockwise motion until door opens. Install 2 fresh AAA batteries as shown in the diagram. Replace door. Use coin to tighten the door. Turn in a clockwise motion until door is secure.

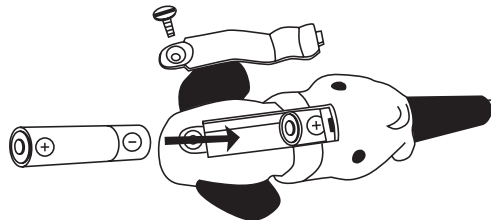

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

Cleaning Instructions

Clean "Ace" with a damp or dry cloth. Do not immerse or spray liquid or water on "Ace."

Troubleshooting

If "Ace"—the Talking, Teaching Dog does not work the first time you use it:

- Make sure you have installed the 2 AAA batteries.

If "Ace" does not work after using it successfully:

- Take out the batteries and reinsert them, making sure that they are sitting properly inside the battery compartment.
- Install fresh batteries.
- Make sure the battery door is tightly secured.

If "Ace" still does not work:

- Make sure "Ace's" tip is held straight up and down and is touching the center of the answer dot.

© Educational Insights, Inc.

How to Position "Ace"



Make sure the tip of "Ace" sits flat on the surface of the answer dot as shown above.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Educational
Insights®