

Special Features of the Magical Talking Wand™

The Magical Talking Wand™ plays seventeen cool phrases and fun sound effects and glows green and red for answer reinforcement.



Press this 3-position button to select the type of sounds you want to hear. Press to hear Speech, Sound Effects, or a mix of Speech and Sound Effects.



Press this 3-position button on the front of the wand to choose volume level: low, high, or mute (no sound).

The wand's jewel-like top is a special window that glows GREEN for correct answers and RED for incorrect answers.


Using the Magical Talking Wand™

1. Read a question.
2. Position the wand straight up and down and touch an answer dot by pressing the wand's tip on the center of the answer dot.

If correct, the wand plays positive sounds and glows green.

If incorrect, the wand plays wrong answer sounds and glows red.

How to Position the Magical Talking Wand™

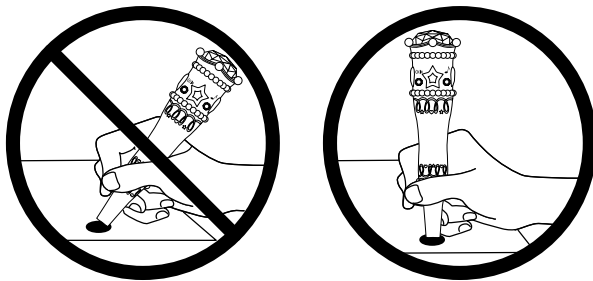


Make sure the tip of the wand sits flat on the surface of the answer dot as shown above.

Caring for Your Magical Talking Wand™

How to Install and Replace the Batteries

The wand requires 2 AAA batteries, not included. To install the batteries, use a coin to unscrew the battery door on the back of the wand. Turn the coin in a counterclockwise motion until the door opens. Install 2 fresh AAA batteries as shown in the diagram. Replace the door. Use coin to tighten the door.

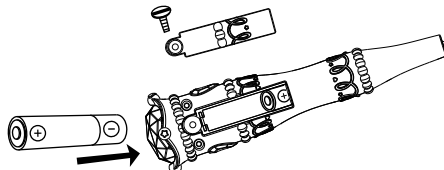

Turn in a clockwise motion until the door is secure.

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

Cleaning Instructions

Clean the wand with a damp or dry cloth. Do not immerse or spray liquid or water on the wand.

Troubleshooting

If the Magical Talking Wand™ does not work the first time you use it:

- Make sure you have installed 2 AAA batteries in the proper orientation.

If the Magical Talking Wand™ does not work after using it successfully:

- Take out the batteries and reinsert them, making sure that they are sitting properly inside the battery compartment.

- Install fresh batteries.
- Make sure the battery door is tightly secured.

If the wand still does not work:

- Make sure its tip is held straight up and down and is touching the center of the answer dot.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

