

## Special Features of “Kat”—the Talking, Teaching Kitty

“Kat”—the Talking, Teaching Kitty plays fourteen cool phrases and fun sound effects and glows green and red for answer reinforcement. When you get three or more in a row correct answers, “Kat” is overjoyed and shows it with a chime and a shake for even more positive reinforcement.



Press this 3-position button to select the type of sounds you want to hear. Press to hear Speech, Sound Effects, or a mix of Speech and Sound Effects.



Press this 3-position button on the front of the pen to choose volume level: low, high, or mute (no sound).

“Kat’s” eyes are a special window that glows GREEN for correct answers and RED for incorrect answers.

## Using “Kat”—the Talking, Teaching Kitty

1. Read a question.
2. Position “Kat” straight up and down and touch an answer dot by pressing “Kat’s” tip on the center of the answer dot.

If correct, “Kat” plays positive sounds and glows green.


If incorrect, “Kat” plays wrong answer sounds and glows red.

If you get three or more in a row correct, “Kat” plays a special chime and shakes.

## Caring for “Kat”—the Talking, Teaching Kitty

### How to Install and Replace the Batteries

“Kat” requires 2 AAA batteries, not included. To install the batteries, use a coin to unscrew the battery door on the back of the pen. Turn the coin in a counterclockwise motion until the door opens. Install 2 fresh AAA batteries as shown in the diagram. Replace the door. Use coin to tighten the door. Turn in a clockwise motion until the door is secure.

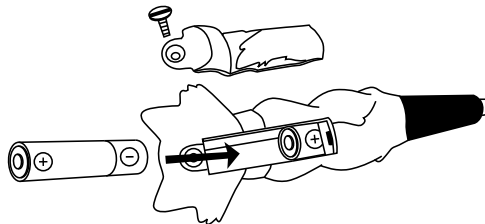

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

## Cleaning Instructions

Clean "Kat" with a damp or dry cloth. Do not immerse or spray liquid or water on "Kat."

## Troubleshooting

**If "Kat"—the Talking, Teaching Kitty does not work the first time you use it:**

- Make sure you have installed 2 AAA batteries in the proper orientation.


**If "Kat" does not work after using it successfully:**

- Take out the batteries and reinsert them, making sure that they are sitting properly inside the battery compartment.
- Install fresh batteries.
- Make sure the battery door is tightly secured.

**If "Kat" still does not work:**

- Make sure "Kat's" tip is held straight up and down and is touching the center of the answer dot.

## How to Position "Kat"

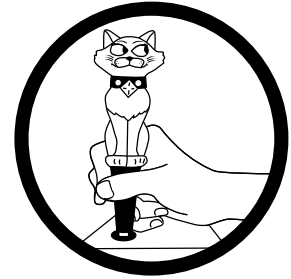

Make sure the tip of "Kat" sits flat on the surface of the answer dot as shown above.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

