

School Time STOPWATCH

Batteries included

**It's a
stopwatch,
a clock, and
an alarm!**

Time races,
games, tests,
and much more!

Shows split/lap
times to a
hundredth of a
second, optional
24-hour cycle
and the date!



© 2006 Educational Insights, Inc., Rancho Dominguez, CA 90220
(USA). All rights reserved. Conforms to ASTM F 963.
Made in China. Please retain this information.
CUSTOMER SERVICE: (800) 995-4436 M-F
www.educationalinsights.com



BATTERY INSTRUCTIONS

When display dims or is blank, replace the old battery with a new UCC 392 Renata 2 or Toshiba LR41 (1.55V) battery. To replace, loosen screws on back cover. While holding your index finger on the MODE switch cap, gently jiggle the back housing until you separate the back together with the switch cap (see figure A). Remove insulating film to reveal battery. Rotate the electrical contact to the side and lift the battery out. Place new battery in with negative side first so the positive side is facing the back of the stopwatch.

To reassemble, replace the MODE switch cap first. Set the MODE switch on so that the side teeth are oriented toward the back (see figure B). Then slide rear housing onto the back and tighten the screws.

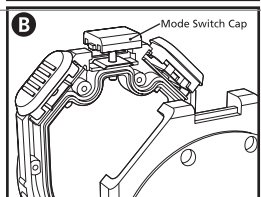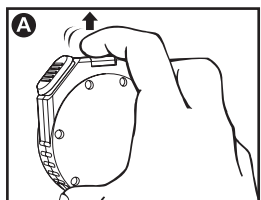

SchoolTime STOPWATCH

Features

- Count and stop function
- Lap and reset function
- Displays day, date, and time
- Alarm, snooze, and optional hourly chime
- Water resistant
- Adjustable neck cord
- Displays .01 seconds, seconds, minutes, and hours

02:55:36

02:57:02

02:59:44

03:02:13

03:05:58

03:23:25

TO USE THE STOPWATCH

Starting in clock MODE:

1. Press **MODE** 1 time. The stopwatch may display the elapsed time from the last use. The *SU*, *FR* and *SA* "day" segments will flash.
2. Press **SPLIT/RESET** to reset the time to 0:00.00.
3. Press **START/STOP** to start timing. The display shows the elapsed time. The *SU* and *SA* "day" segments will flash.
4. Press **START/STOP** to stop timing.
5. Press **SPLIT/RESET** to reset the time to 0:00.00.
6. When you're done, press **MODE** to return to clock MODE.

TO USE THE SPLIT LAP FEATURE

While the stopwatch is running:

1. Press **SPLIT/RESET** to pause the display so you can view a split lap time. The *TH* "day" segment under the word **SPLIT** will flash.
2. Press **SPLIT/RESET** again to return to elapsed time.

TO TURN ON THE ALARM

Starting in clock MODE:

1. To view the current alarm time: press and hold **SPLIT/RESET**.
2. To turn the alarm on or off: press and hold **SPLIT/RESET** then press **START/STOP**. The **BELL** icon shows in the upper right when the alarm is on and disappears when it is off.

TO SET THE ALARM TIME

Starting in clock MODE:

1. Press **MODE** 2 times. The display will flash the number to be set. The *MO* "day" segment under the word **ALARM** will flash.
2. Press **START/STOP** to increase the number that you are setting. If you press and hold **START/STOP** the number will increase quickly.
3. Press **SPLIT/RESET** to advance to the next number to set. The numbers display in hours then minutes.
4. When the alarm is set, press **MODE** to return to clock MODE.

TO SET THE TIME/DATE

Starting in clock MODE:

1. Press **MODE** 3 times. The display will flash the number to be set. The *TU* "day" segment under the word **TIME** will flash.
2. Press **START/STOP** to increase the number that you are setting. If you press and hold **START/STOP** the number will increase quickly.
3. Press **SPLIT/RESET** to advance to the next number to set. The numbers display in this order: seconds, minutes, hours, date, month, day. As you cycle through the hours, it will display an "H" when going into 24 hour time.
4. When the time is set, press **MODE** to return to clock MODE.

TO SET THE SNOOZE

When the alarm sounds, press **START/STOP**. In five minutes, the alarm will sound again.

TO SET/CANCEL THE HOURLY CHIME

Starting in clock MODE:

Press and hold **SPLIT/RESET** and then press **MODE**. When the days of the week appear, the hourly chime is set. To cancel, press **SPLIT/RESET** and **MODE** until the days of the week disappear.

TO VIEW THE DATE

Starting in clock MODE:

Press and hold **START/STOP**.

Educational
Insights®

